

SparkFun RFID Starter Kit

KIT-13198







The RFID USB Reader is a simple to use, USB to serial base unit for the ID-3LA, ID-12LA, and ID-20LA readers. Simply plug a reader into the headers and attach a miniUSB cable. Open a terminal program of your choice at 9600bps 8N1, then scan your 125kHz ID tag and the unique 32-bit ID will be shown on the screen. The unit is based on a FTDI chip and comes with a read LED and buzzer.

The ID-12LA is a very simple RFID reader module. It plugs directly into the USB reader to allow you to read RFID tags through a USB connection. Power the module, hold up a card, and get a serial string output containing the unique ID of the card.

Includes:

- 1 x RFID USB Reader
- 1 x ID-12LA RFID Module
- 2 x RFID Card 125kHz